



STEP 1: Peel backer from tile.

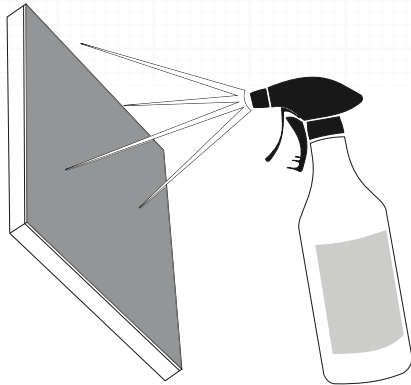


STEP 2: Lightly spray the adhesive side of tile with mild soapy water, ensuring there are no dry spots.

BE CAREFUL NOT TO OVER SPRAY

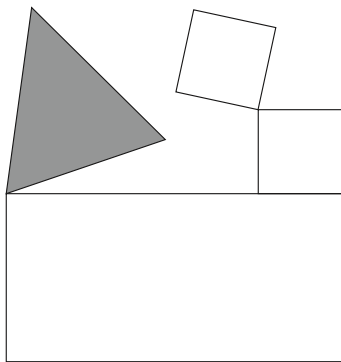

STEP 3: Place the tile in its approximate location.

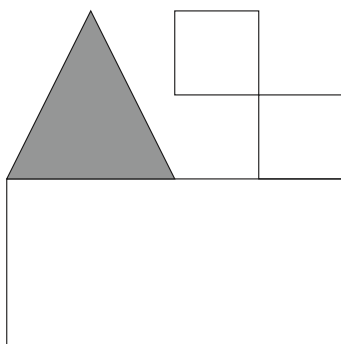

STEP 4: While the adhesive is moist, the tile can be maneuvered into alignment. When the tile is in the desired location, press it firmly against the wall to set into place. Allow 24 hours to dry for permanent bond.

Please note: Design Studio Tiles may have a natural thickness variance between tiles and could require shimming