

ECOUSTIC® TORQUE INSTALLATION + CARE




unika vaev
INSTYLE

ECOUSTIC® TORQUE WALL INSTALLATION


ASSEMBLY INSTRUCTIONS

Supplied

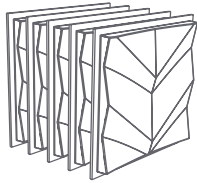

8x ecooustic® Torque tiles
 Sold in boxes of 8 per color
 17x 4-way joiner clips (inc. 1 spare)
 Clip template
 Installation instructions

Source



Flat-head c/sunk
 1" (25mm) 10g
 [4-8 per tile]




Power drill

Essential



Clean hands
 Handle with care
 during installation

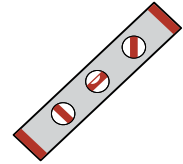


Spirit level

INSTALLATION


Step 1

In most situations it is best to measure up from the floor and mark a straight line along the base of the area, this line is your starting point. Use this mark and begin from the bottom left corner.

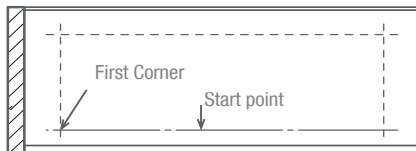


Step 2

Using screws suitable for your substrate, fix the first corner in place.
 Note: Always use a secure, mechanical means of fixing.

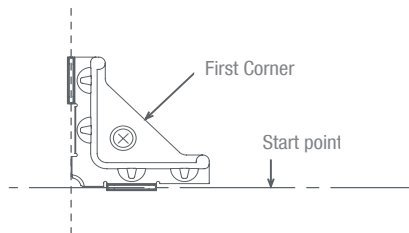


Step 3

Use the supplied template to fix additional clips necessary to support the tile, including clips at mid points of the tiles.

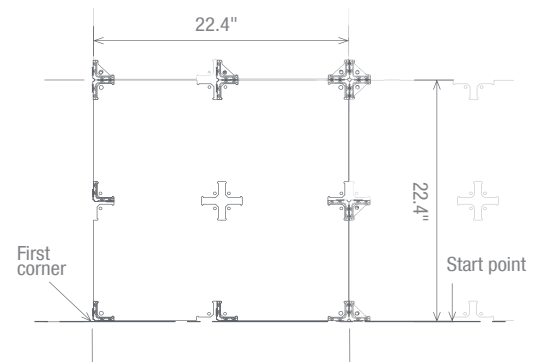


Step 4

Using the template work your way up the wall in columns. Finish the top with corner clips on corners + edge clips on straight joins.
 Note: never use the tiles to measure spacing.

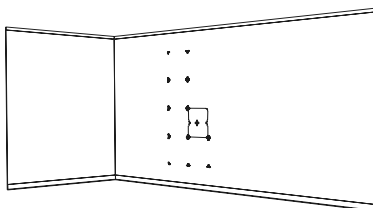


Step 5

Once you have two columns up, double check your spacing by installing the first column of tiles. Always stay one column ahead of the installed tiles so the tiles don't interfere with the spacing.

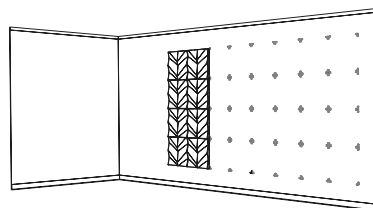

Step 6

Install the rest of your clips and put up the tiles to finish.

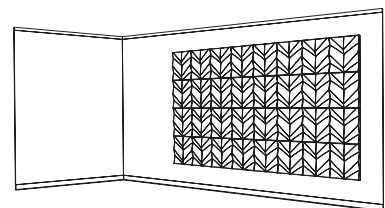

ECOUSTIC® TORQUE WALL CARE

CARE INSTRUCTIONS

Please Note

- Care must be taken when cleaning as these instructions apply to the fabric face only and the possible effect of the cleaning regime on underlying bases and wall surface must be considered
- For these reasons it is suggested to spot clean only and that it be carried out by a professional cleaner.

Regular Care

- Protect from direct heat and sunlight
- To prevent dust build up, lightly dust with a soft cloth or vacuum with a soft brush attachment

Cleaning

- Professional cleaning is always recommended
- Always test any cleaning products on an inconspicuous area prior to commencing cleaning
- Blot any excess spills from the material with a dry clean sponge or cloth
- Treat all stains and spills as soon as possible
- Most marks can be spot cleaned by lightly wetting the affected area with a mild detergent and warm water solution
- Do not saturate the tile
- Do not scrub or abrade the tile surface as this will affect the surface finish
- Once the stain or mark has been loosened then blot the excess solution out with a dry clean sponge or cloth
- Sponge afterwards with clean warm water and dry any excess moisture with a dry clean sponge or cloth
- The product can also be spot cleaned with dry cleaning fluid, lightly sponge a small amount of dry cleaning fluid and blot
- Dry away from direct heat and sunlight
- Do not use carpet shampoo